


Answers to common technical questions about the CONCENPOWER INTEGRATIVE POWER BANK

Problem of energy saving mode

Dear Customer:

All series of CONCENPOWER integrative power bank are equipped with "energy saving mode". All products in our factory are set to the energy-saving mode to the off state, and "energy-saving mode: off". In order to avoid unnecessary energy loss caused by trying to store the machine or long-term transportation, the machine's energy-saving mode automatically turns on the energy-saving mode during this period, that is, "Energy-saving Mode: On". Therefore, if the machine you get is left unused for a long time, please turn off the energy saving mode before using the machine. The operation steps are as follows:

1. Turn on the main ON-OFF as shown in the figure below:

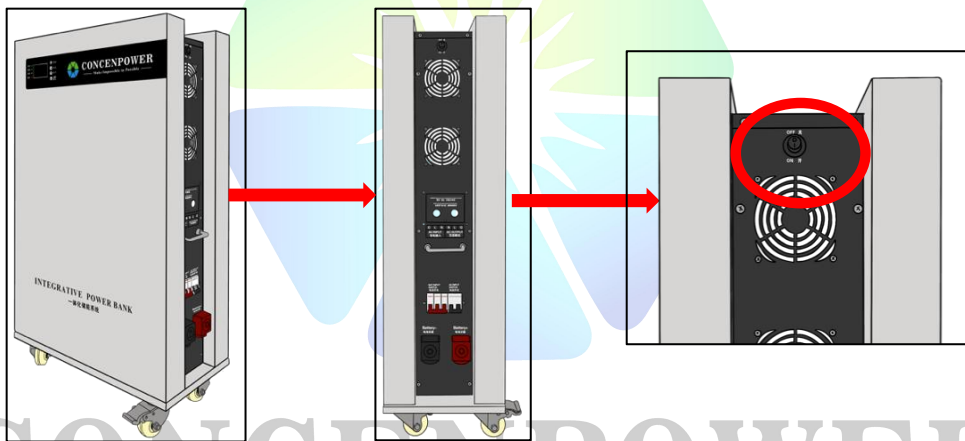

2. Observe the display screen. After the display screen enters the normal working mode, long press the "Settings" button to enter the system setting interface.



3. Press the "Down" button to select "Energy Saving Mode", and press the "Setting" button to set, after setting the Energy Saving Mode to OFF, press "Return" to use the machine.

(If the machine you are using does not have as many items as shown in the picture,

please also select the energy saving mode)



Note: Before the above operations are performed, it is strictly forbidden to connect the unit to the AC output line and use any electrical appliances.